


# IN-Route Road Stem Installation Instructions




*\*Applicable for installing both the standard ENVE Aero IN-Route Stem and the ENVE Aero IN-Route High-Rise Stem*

**Tools Needed:**




**4mm Torque  
Wrench (5.5Nm)**


**1.**

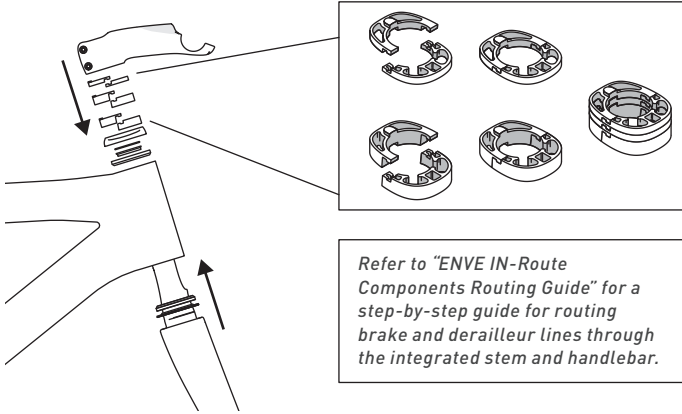


**2.**

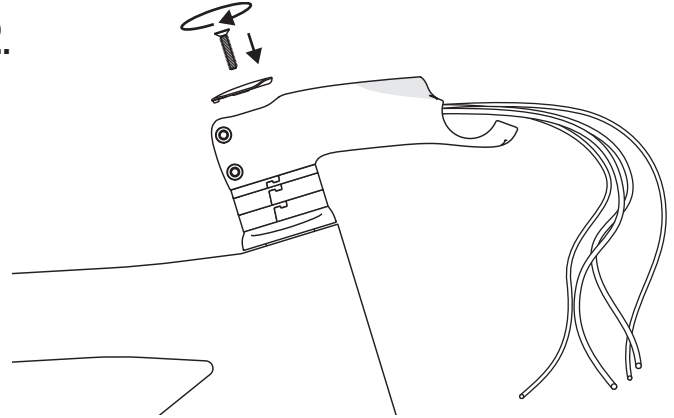


**3.**

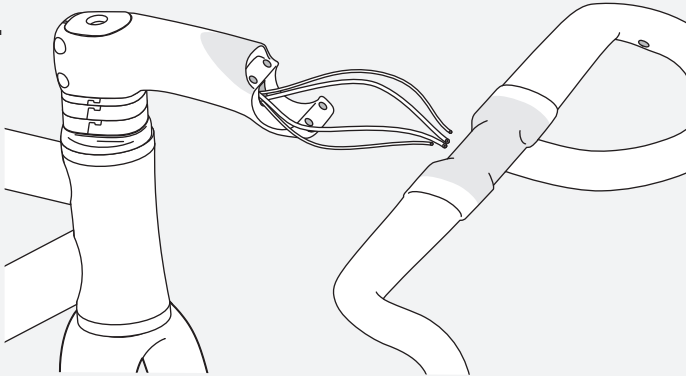


**4.**

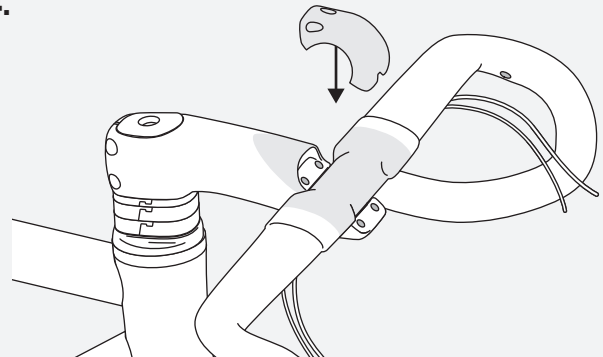

**5.**

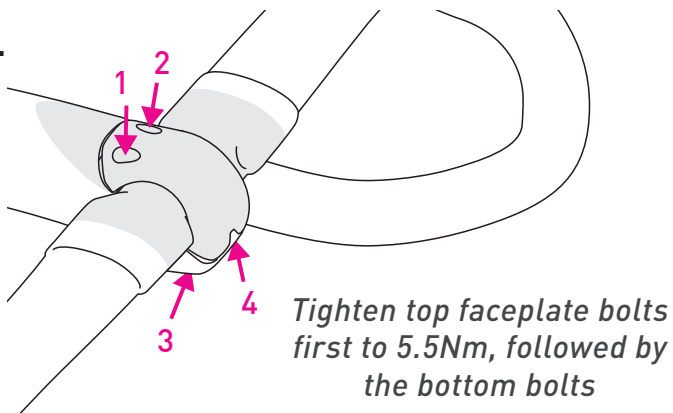

**6.**

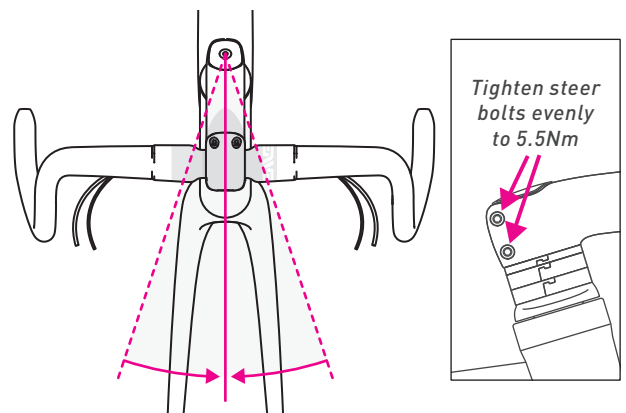



**ENVE IN-Route Road Stem  
Installation Instructions**

ENVE Composites, LLC  
Ogden, UT 84401, USA