


Carbon Road Stem Installation Instructions




Tools Needed:

4mm Torque
Wrench (5.5Nm)




5mm Allen Key


1.

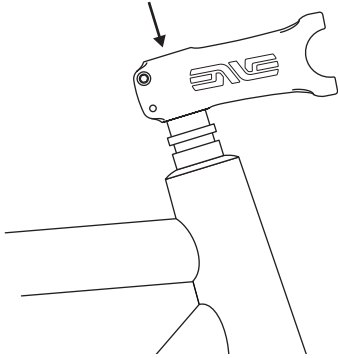


2.

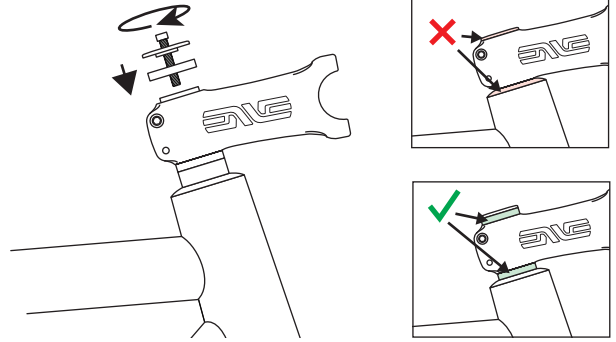


3.

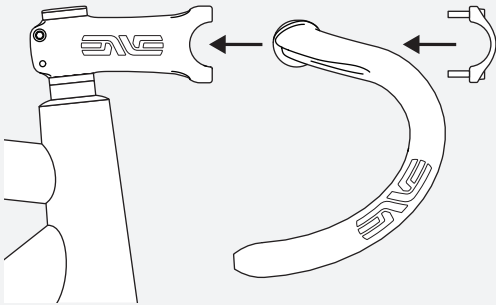


4.

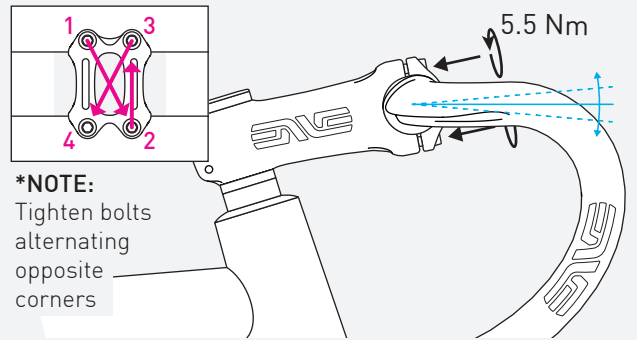

5.

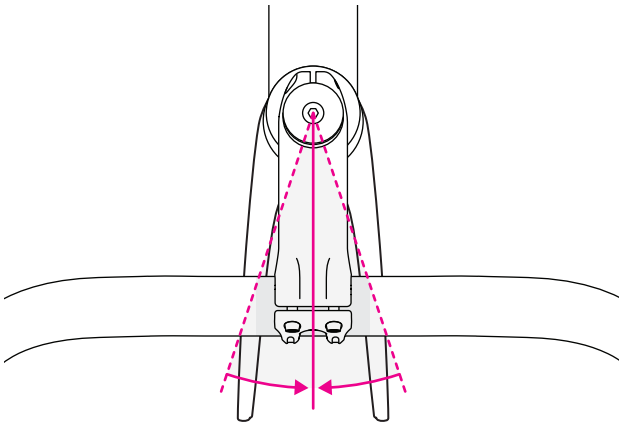

6.

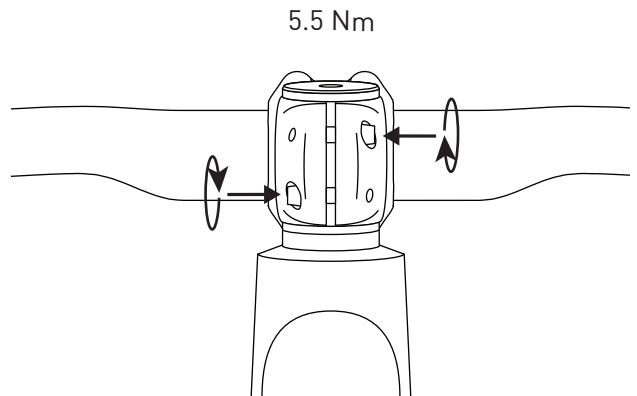



**ENVE Carbon Road Stem
Installation Instructions**

ENVE Composites, LLC
Ogden, UT 84401, USA