

SES Aero Road Stem Installation Instructions


Tools Needed:




-7° & -17°

-12°, +2.5mm & -2.5mm


1.

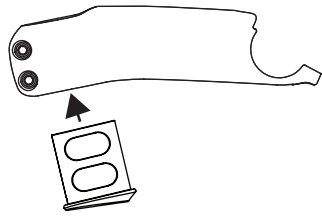


2.

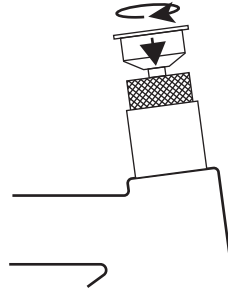


3.

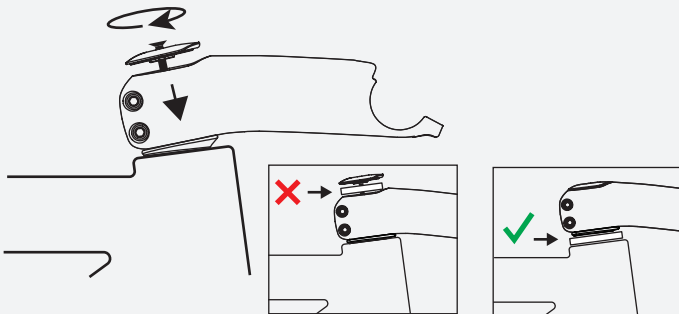

4.

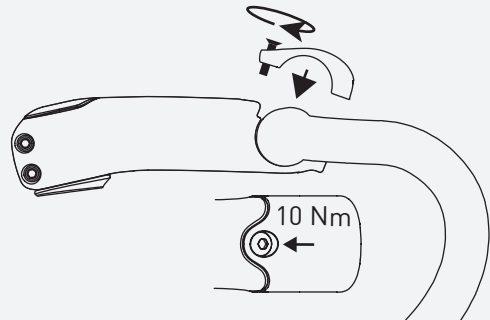

5.

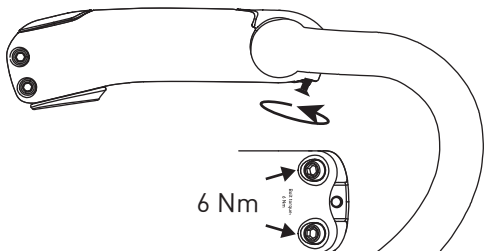

6.

