


Carbon Mountain Stem Installation Instructions




Tools Needed:
4mm Torque
Wrench (5.5Nm)


1.

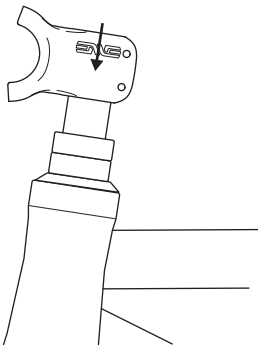


2.

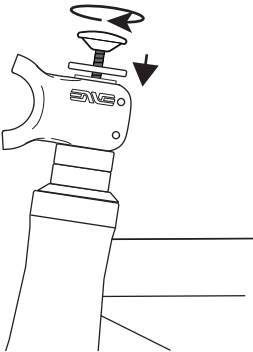


3.

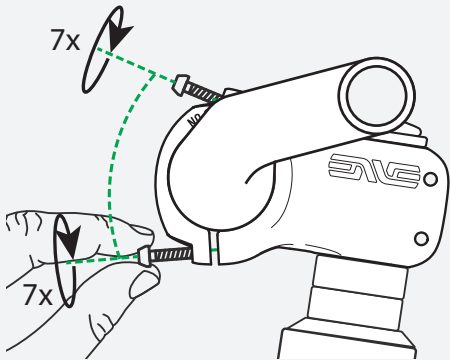


4.

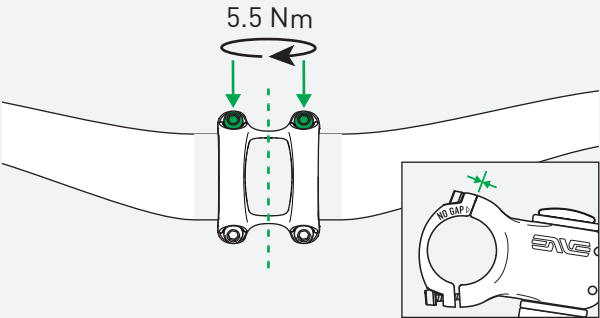

5.

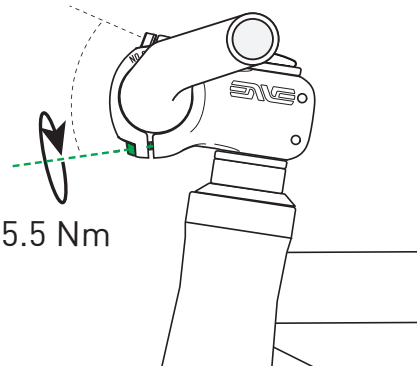

6.

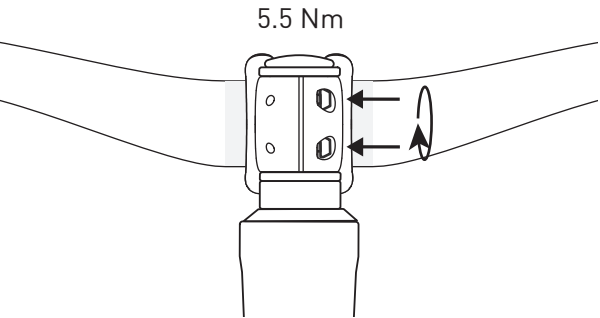



ENVE® Carbon Mountain Stem Installation Instructions

ENVE® Composites, LLC
Ogden, UT 84401, USA